

Syncing RF Controllers

Receiver can be controlled by any one the same remote as factory default; full touch remote control delivered with unique RF code as factory default; if unique-control is needed, use follow **pair to single remote/controller** before installation.

Pair to single remote/controller

If unique-control or new-coded-remote is needed, pairing the remote and the receiver as below operation instruction before using:

1. **Step 1:** Pressing key "**Mode**" and hold on, power on the controller, the load LEDs will be 50% brightness white as responding.
2. **Step 2:** Continuously to press the key "**Pause**" for 3 times within 5 seconds after step 1, the brightness of LEDs will change from 25% -10% as responding.
3. Code learning successfully, the LEDs will be back to the status before the power off, and the receiver only can be control by the remote.
4. If not, please re-operate from step 1 to 2.

Pair to multiple controller

Back to factory default, wall-panel can be controlled by any one the same remote control.

1. **Step 1:** Pressing key "**Mode**" and hold on, power on the controller, the load LEDs will be 50% brightness white as responding.
2. **Step 2:** Continuously to press "**Speed/Brightness -**" 3 times within 5 seconds after step 1, the brightness of LEDs will change from 25% -10% as responding.
3. Code clearing successfully, the LEDs will be back to the status before the power off, and the receiver can be controlled by any remote control (any one the same remote control can be used to clear the code).
4. If not, please re-operate from step 1 to 2.

