



MOUNTING AND WIRING INSTRUCTIONS

1. First release glass diffuser lens by pressing tabs on each end of the XTL. This loosens the glass lens which will swing down.

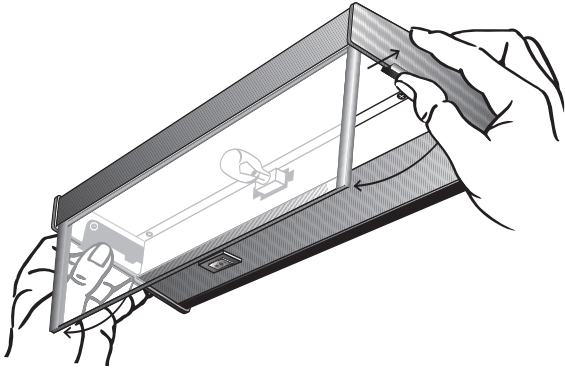

NOTE: Four and five bulb units have magnet(s) on center of lens which will require a gentle pry downward with a small screwdriver on the lens to release.

2. Easy mounting is assured by simply positioning fixture on mounting surface and driving the two pre-positioned screws into underside of cabinet with a power screwdriver. See below.

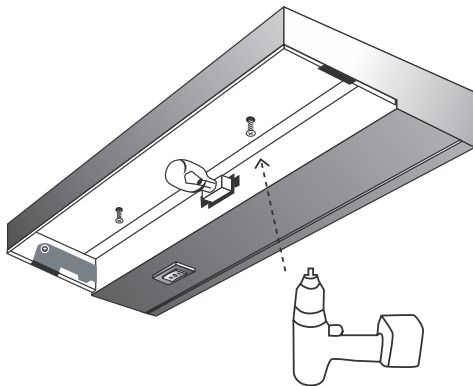


NOTE: For wall or under cabinet mount only.

NOTE: Power cord version: proceed to item #7.

CAUTION! Only qualified electricians, or people familiar with household electrical circuits, should bring 120V power to the fixture. Before bringing 120V wire to fixture, make sure incoming wire is not "hot" and all power to wire is off. Not for use with rigid conduit systems. Use flexible conduit to attach to fixture.

3. Through one of the many knockouts provided, bring in 120V power wiring. Secure to fixture with appropriate strain relief.
4. Strip 1/3" (8mm) of the insulation off each incoming 120V power wire. Connect white wire (neutral wire) to push-in connector on white wire from transformer. Connect black incoming 120V power wire (hot wire) to push-in connector on black wire from switch. Connect ground wire to push-in connector from ground wire attached to fixture. Push all wires firmly down into connectors, so that uninsulated wire is not exposed.

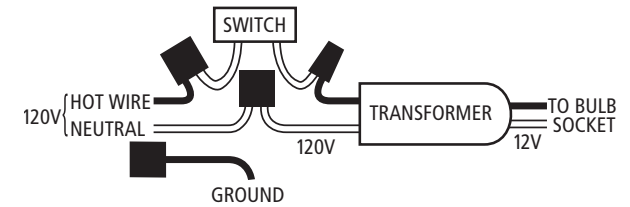

5. Check all connections. Close wiring cover by pushing firmly into fixture until thumb release "clicks" into place and replace cover set screws. Make sure cover is secure before installing diffuser.
6. Replace glass diffuser by swinging glass lens into position until it clicks in place.
7. For power cord units: This portable lamp has a grounded plug as a feature to reduce the risk of electrical shock. Insert grounded plug into appropriate grounded receptacle. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.
8. Apply 120V power to incoming wiring. Test fixture in both "HI" and "LOW" switch settings.

RELAMPING INSTRUCTIONS

CAUTION! If unit has recently been operating, glass, bulb(s), and fixture are hot! Turn off fixture and allow it to cool for 15 minutes before relamping.


CAUTION! Always replace bulbs with fixture switch in the OFF position.

NOTE: Using a thin pair of gloves during this procedure will eliminate fingerprints on glass lens and Xenon bulbs.

1. Release glass diffuser lens by pressing tabs on each end of the XTL. This loosens the glass lens which will swing down.
2. Remove Xenon bulbs by pulling directly outward from bulb socket. Replace with 18 watt, 12 volt, Xenon wedge based bulb only! Push bulb directly into socket until bulb base is firmly seated in bulb socket.
3. Replace glass diffuser by swinging glass lens up into position until it clicks in place.

THROUGH-WIRE, 120V POWER

- Disconnect from all 120V power prior to installation.
- Connections must be made in accordance with current Canadian Electrical Code and all local building codes.
- Interconnect up to 1188 watts (66 bulbs).
- 14 gauge (Romex Type) or better wire is required.
- Requires strain reliefs.
- Power cord version should not be used for multiple wiring.

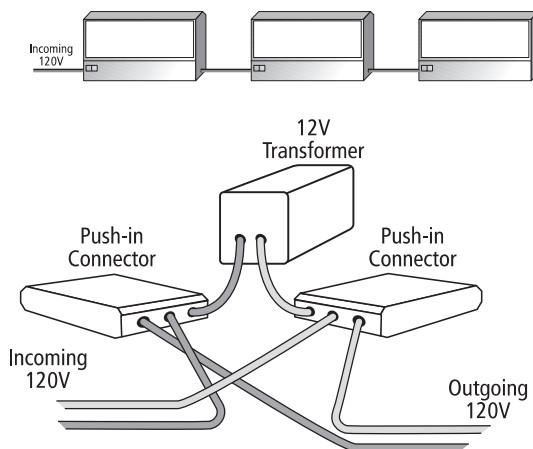


MAGIC LITE
YOUR TRUSTED LIGHTING PARTNER

2526 Speers Road, Unit 4-9
Oakville, Ontario, Canada L6L 5M2
Tel: 905-825-9592 • Out of Area: 1-888-945-5483 • Fax: 905-825-8334
www.magiclite.com

INSTALLATION INSTRUCTIONS

XENON TASK LIGHT

Self-Contained
Task Light Fixture

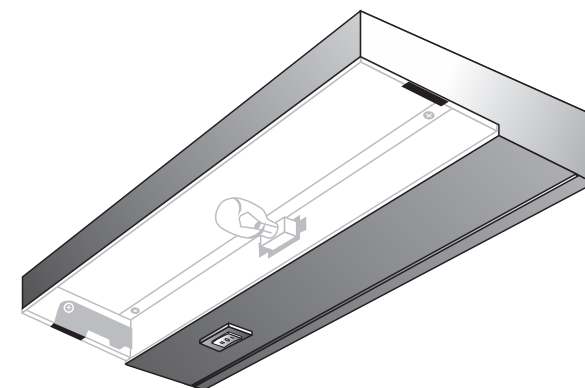

Under cabinet task light

*
Bright enough for writing and detail work

*
High-low dimmer switch

*
Cooler and safer than halogen lights

*
10,000 hour bulb life

*
Suitable for Damp Locations

MAGIC LITE
YOUR TRUSTED LIGHTING PARTNER

